



# 2009 Mazda B-Series TRUCK

## SMART START GUIDE



Optional equipment shown.





## REMOTE ENTRY SYSTEM

### Unlocking the Doors

- 1 Press the button and release to unlock the driver's door; the interior lamps will illuminate.
- 2 Press the button again and release within three seconds to unlock all of the doors.

### Locking the Doors

- 1 Press the button and release to lock all the doors; the park lamps will flash once to confirm lock.
- 2 Press the button again and release within three seconds; the lamps will flash again and the horn will chirp to confirm all doors are locked and closed.


**Note:** If either door is not properly closed, the lamps will not flash.

### Sounding the Panic Alarm

- 1 Press the button to activate the alarm; the horn will sound and the park lamps will flash for approximately three minutes. Press the button again or turn the ignition to the ON position to deactivate.

### Power Door Lock

- Press the control button to unlock or lock all of the doors.

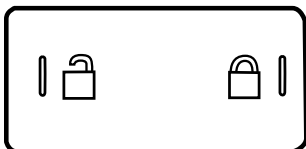

### Auxiliary Key





## MANUALLY OPERATED DRIVER SEAT

### Front Seat Lever

Lift the release bar to slide the seat forward or backward. Ensure the seat is locked in place.



### Side Seat Lever

Pull the lever located at the side of the seat cushion to adjust the tilt of the seatback forward or backward.



## CENTER FACING JUMP SEAT

- To open, pull the seat assembly down, then raise the seatback.
- To stow the seat, fold the seatback down and raise the seat assembly to the fully upright position.



# Driver's View



**INSTRUMENT  
PANEL DIMMER**  
(behind steering wheel)

**TURN SIGNAL/WIPER/  
WASHER CONTROL**

**DRIVER AIR BAG**




**HEADLAMP CONTROL**

**PARKING BRAKE  
RELEASE**  
(behind steering wheel)

**HOOD RELEASE**

**4X4 CONTROL**

**PASSENGER AIR BAG  
INDICATOR**

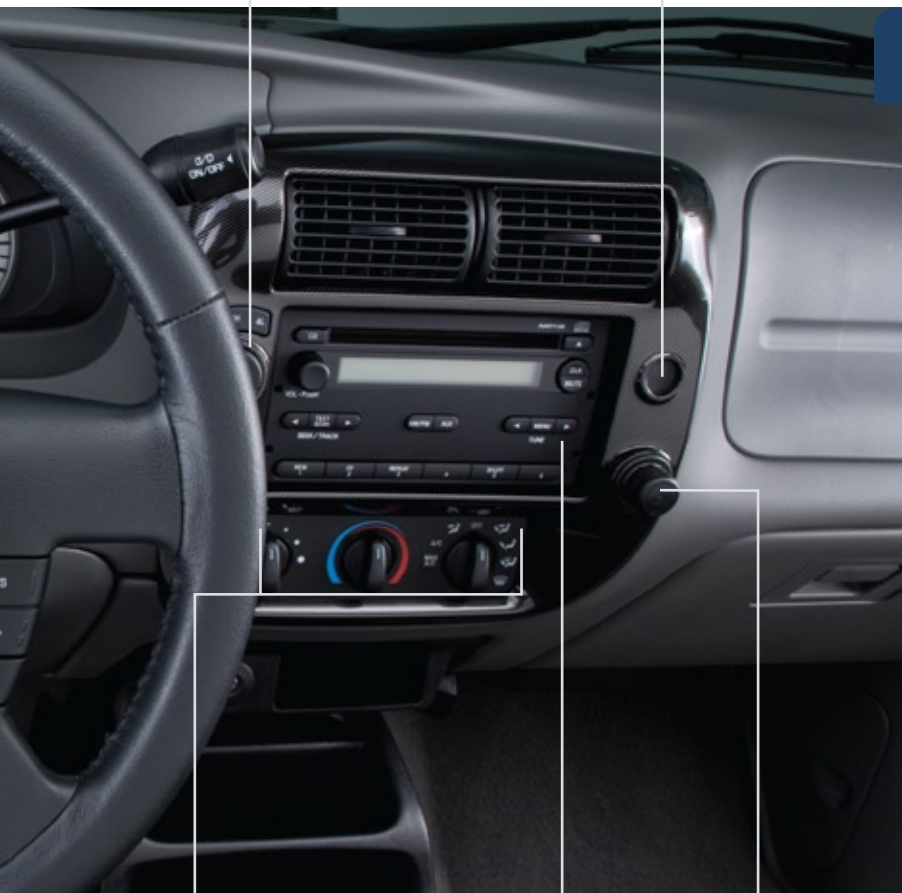

**CLIMATE  
CONTROL**

**AUDIO SYSTEM**

**AUXILIARY  
POWER POINT**

# Instrument Cluster

See Owner's Manual for more details and explanations.



**TACHOMETER**

**ODOMETER/  
TRIP METER**

**TRIP ODOMETER  
RESET BUTTON**

**ENGINE COOLANT  
TEMPERATURE GAUGE**

## **GLOSSARY OF WARNING AND INDICATOR LIGHTS**

*Please see Owner's Manual for more details and explanations*



**High Beams On**



**Tire Pressure Monitoring  
System (TPMS)**



**Engine Coolant  
Temperature**



**Fog Lamps On**



**Charging System**



**Check Engine**



**Cruise Control**



**Anti-lock Brake  
System (ABS)**



**Check Fuel Cap**



**Brake System**



**Low Fuel**





FUEL GAUGE

SPEEDOMETER

GEARSHIFT  
INDICATOR (AT)\*

TURN SIGNAL/  
HAZARD WARNING ON



Door Ajar



4X4 HIGH



Overdrive Off



4X4 LOW



Seat Belt



Air Bag Readiness



Anti-Theft On



Engine Oil Pressure



Turn Signal/  
Hazard Warning

# Feature Highlights



## WINDSHIELD WIPER/WASHER

### Windshield Wiper/Washer

- Rotate the end of the control away from you to increase the speed of the wipers; rotate toward you to decrease the speed of the wipers.
- Pushing the end of the stalk will dispense washer fluid and the wipers will make several passes across the windshield.







### High Beam Operation

- To turn high beams ON, push the lever forward.
- To turn high beams OFF, pull the lever back one position.
- To flash high beams, pull the lever back all the way and release.


## LIGHTING CONTROLS



### Headlamp Control

-  Rotate the lighting control knob to turn all lights off.
-  Rotate the lighting control knob to the first position to turn on tail, parking and dashboard lights.
-  Rotate the lighting control knob to turn on tail, parking, dashboard and headlights.
-  Pull the lighting control knob to turn on foglamps; the indicator light will illuminate in the instrument cluster.

### Panel Dimmer Control

-  Move the control up or down to adjust the intensity of the panel lighting.

# Feature Highlights



## AUTOMATIC TRANSMISSION

### **D (Overdrive)**

This is the normal driving position for the best fuel economy. The transmission shifts through all forward gears.

### **D (Overdrive Off) <sup>O/D</sup> OFF**

Press the **Overdrive Off** switch to disengage or re-engage overdrive. The indicator illuminates on the instrument cluster when overdrive is off.

Driving without overdrive provides a lower gear for city traffic where continuous shifting in and out of overdrive occurs, hilly terrain, heavy loads, trailer towing and when engine braking is required.



## FOUR-WHEEL DRIVE (4WD)

### Using the Electronic Shift 4WD System

#### **2H (2WD High)**

Use this position for street and highway driving.

#### **4H (4WD High) <sup>4x4</sup> HIGH**

Use this position for extra traction, such as on snow or icy roads or off-road situations. Not intended for use on dry pavement.

#### **4L (4WD Low) <sup>4x4</sup> LOW**

Use this position for extra gearing to provide maximum power to all four wheels. Intended only for off-road applications, such as deep sand, steep grades or pulling heavy objects. 4L (4WD Low) will not engage while the vehicle is moving; this is normal and should be no reason for concern. Refer to the Owner's Manual for further information.



# Feature Highlights




## MP3 PLAYER INTEGRATION USING THE AUX JACK


The AUX, or auxiliary jack, will allow you to play your MP3 player through the vehicle's audio system.

- 1 Plug your MP3 player into the AUX jack and turn it on.
- 2 Turn the vehicle audio system on.
- 3 Press AUX on the vehicle radio repeatedly until LINE IN appears in the display. You should hear audio from your portable music player although it may be low.

**Note:** Set the volume level on your player to the highest level before distortion starts. Then adjust volume in the vehicle using the audio system power/volume control.

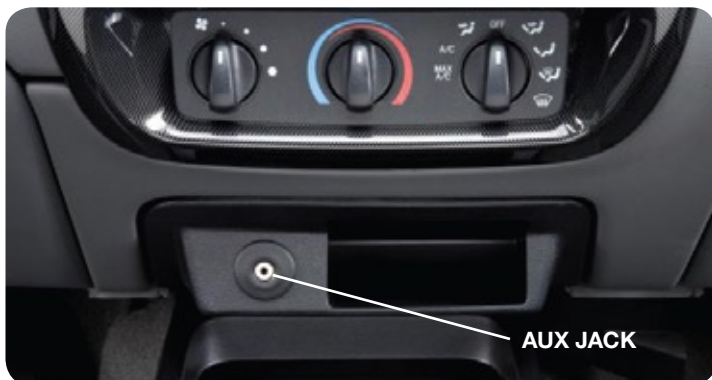

# Manual Climate Control

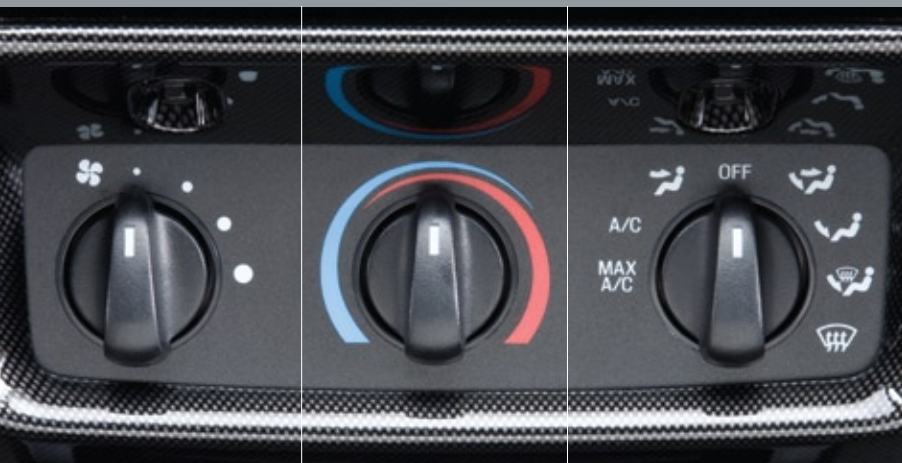

## Fan control dial

- Rotate the dial to set desired fan speed (1-4).

## Temperature control dial

- Rotate the dial to select a warmer or cooler air temperature.


## Mode selector dial

- Rotate the knob to select airflow mode.

**MAX A/C** Economically and efficiently cools the vehicle while recirculating cabin air to reduce exhaust odors.

**A/C** Uses outside air to cool the vehicle. Air flows from the instrument panel vents only.

 Dashboard vents

 
 Dashboard and floor vents

 Floor vents

 Defroster and floor vents

 Windshield Defroster

# Audio Controls



## Audio system on

- Press the POWER/VOLUME button to turn the radio on. Rotate the dial to increase or decrease volume.

## Media selection

Press the appropriate button:

- AM/FM1/2
- CD
- AUX (to switch to AUX jack input)

## Tuning

The radio has the following tuning controls:

- TUNE
- SEEK/TRACK
- SCAN
- PRESET CHANNEL

## Manual tuning

- Pressing the TUNE (◀|▶) buttons will change the frequency higher or lower.


## Seek tuning

- Pressing the SEEK/TRACK (◀|▶) tuning buttons will seek a higher or lower frequency automatically.


## Scan tuning

- Press the SCAN button to automatically sample strong stations.
- To hold a station, press the SCAN button again during this interval.



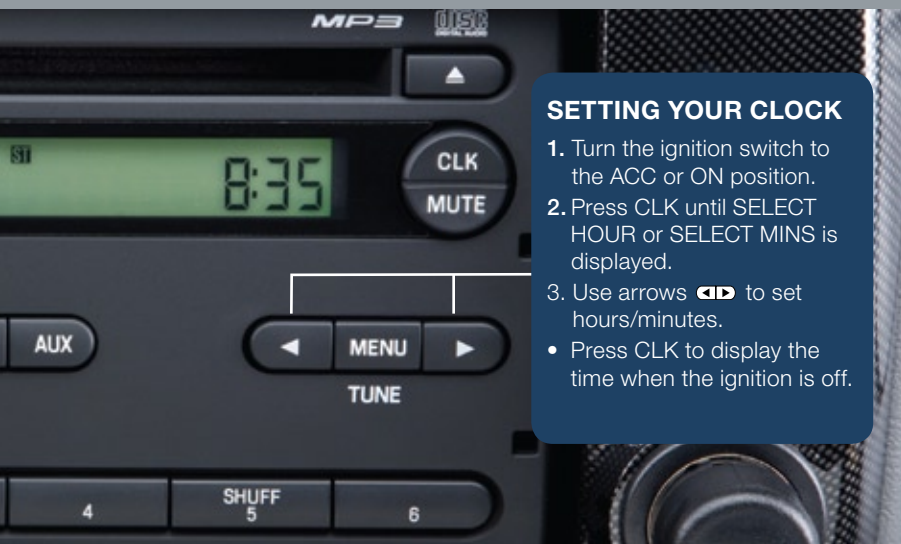

### SETTING YOUR CLOCK


1. Turn the ignition switch to the ACC or ON position.
2. Press CLK until SELECT HOUR or SELECT MINS is displayed.
3. Use arrows  to set hours/minutes.
  - Press CLK to display the time when the ignition is off.

### Preset channel tuning

The 6 preset channels can be used to store 6 AM and 12 FM stations.

- To set a channel, first select AM, FM1, or FM2.
- Tune to the desired station.
- Press and hold a preset button until a beep is heard.
- Repeat this operation for the other stations and bands you want to store.

### Menu

- Press MENU to toggle through the following modes: Autotest, Bass, Treble, Balance, and Fade; press  to adjust.

### Autotest tuning

- Press MENU to set the 6 strongest stations into AM, FM1, or FM2 memory buttons; press again to return to normal stations. Refer to your Owner's Manual for further information.

### Mute

- Press to mute volume; press again for normal volume.

# Notes

[illegible]



VEHICLES SHOPPING TOOLS OWNERS MAZDA SPEED INSIDE MAZDA ZOOM-ZOOM



## ***MYMAZDA.COM—THE OFFICIAL SITE FOR MAZDA OWNERS***

Register today on MyMazda.com—the ultimate destination for Mazda Owners. Once registered, you'll be able to take advantage of benefits exclusively for Mazda owners:

- Insider access to exclusive events and promotions
- Personalized maintenance schedules
- Zoom-Zoom Owner Magazine
- Warranty information and on-line Owners' Manuals
- Wallpaper, videos and other fun stuff
- Accessories specifically designed for your vehicle
- Car Care Discount Coupons available from your Mazda Dealer

**Visit and register at MyMazda.com today!**

# Customer Delivery Checklist

## VEHICLE PRESENTATION:

*Refer to the Smart Start Guide during presentation*

### ☐ Remote Entry ..... 1

- Keyless Transmitter
- Power Door Lock



### ☐ Seats ..... 2-3

- Adjustment
- Rear Jump Seats

### ☐ Driver's View ..... 4-5

- Location of Switches and Controls

### ☐ Instrument Cluster ..... 6-7

- Review indicator light function and location

### ☐ Wiper / Washer ..... 8



### ☐ Lights ..... 9



### ☐ Transmission ..... 10

- Overdrive OFF
- 4 Wheel Drive Operation

### ☐ AUX Input ..... 12

### ☐ Climate Control ..... 13



### ☐ Audio Controls ..... 14-15

### ☐ Set Clock ..... 15



***All items in the Customer Delivery Checklist have been reviewed with the customer and the first maintenance appointment has been scheduled:***

	SALES CONSULTANT	CUSTOMER
Initials		

*Signed copy must be placed in dealer jacket*

*\*if equipped*

# Customer Delivery Checklist

<b>DEALERSHIP</b>	<b>DATE</b>
<b>SALES CONSULTANT</b>	<b>CUSTOMER'S NAME</b>
<b>VIN</b>	<b>E-MAIL</b>

## PRESENTATION OF OWNER'S MATERIALS:

*Review the following items with the customer*

### ☐ Smart Start Guide

- Remove this checklist from Smart Start Guide

### ☐ Warranty Information

- Basic Vehicle –  
36 months/36,000 miles
- Roadside assistance program

### ☐ MyMazda.com

- Offer to register customer on MyMazda.com

### ☐ Owner's Manual

## SERVICE DEPARTMENT

- ☐ Introduce Service Manager;  
Provide business cards
- ☐ Review Service and Parts Department  
hours of operation
- ☐ Explain free Full Circle  
Service Inspection
- ☐ Schedule first maintenance service

*Scheduled Maintenance  
Windshield Cling Reminder  
Affix to inside windshield*

## GENUINE MAZDA SERVICE

***Because you and your Mazda deserve the best***

Your new Mazda deserves nothing less than the very best. To keep it running like new for years to come, trust the experts at your local authorized Mazda Dealer. Simply bring your vehicle in for your scheduled maintenance and any needed repairs.\*

At Mazda Full Circle Service Centers,\*\* our technicians will automatically perform a complimentary Full Circle inspection on your vehicle and issue a detailed report card at every visit. This is designed to help you keep track of your Mazda's critical operating condition. Our factory-trained technicians know your vehicle inside out and use Genuine Mazda Parts, giving your vehicle the optimum care and maintenance it requires to run with flawless precision.

Remember, to further enhance your driving experience, visit your local Mazda Service Center for your scheduled maintenance. It's also the place where you can find a wide variety of tires, parts, and accessories that are just right for your vehicle.

**\* See vehicle's scheduled-maintenance program for details.**

**\*\* Visit [MyMazda.com/fullcircle](http://MyMazda.com/fullcircle) for a list of Full Circle Service Centers**

**Customer Assistance Center: 1-800-222-5500**

**Roadside Assistance Contact: 1-800-866-1998**



### FREE FULL CIRCLE SERVICE INSPECTION

***We're committed to providing expert Mazda service.***

You love to drive your Mazda, and we love to service your Mazda. With our Full Circle Service, we'll give your vehicle a **COMPLIMENTARY MULTI-POINT INSPECTION**. Your Mazda will receive a thorough review of its most crucial components.

This easy-to-use Smart Start Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner's Manual. The Owner's Manual contains more detailed information to help you better understand the important safety warnings, features, operation, and maintenance of your vehicle. All information, specifications, photographs and illustrations in this publication are those in effect at the time of printing. Mazda reserves the right to change specifications or design without obligation.

© Mazda North American Operations  
Printed in U.S.A. 07/08  
9999 95 023C 09SS

